


Addressable module programmed with non latching input to collect alarm / fault signal fom AOV panel. Output to activate the AOV via alarm cause and effects of addressable panel

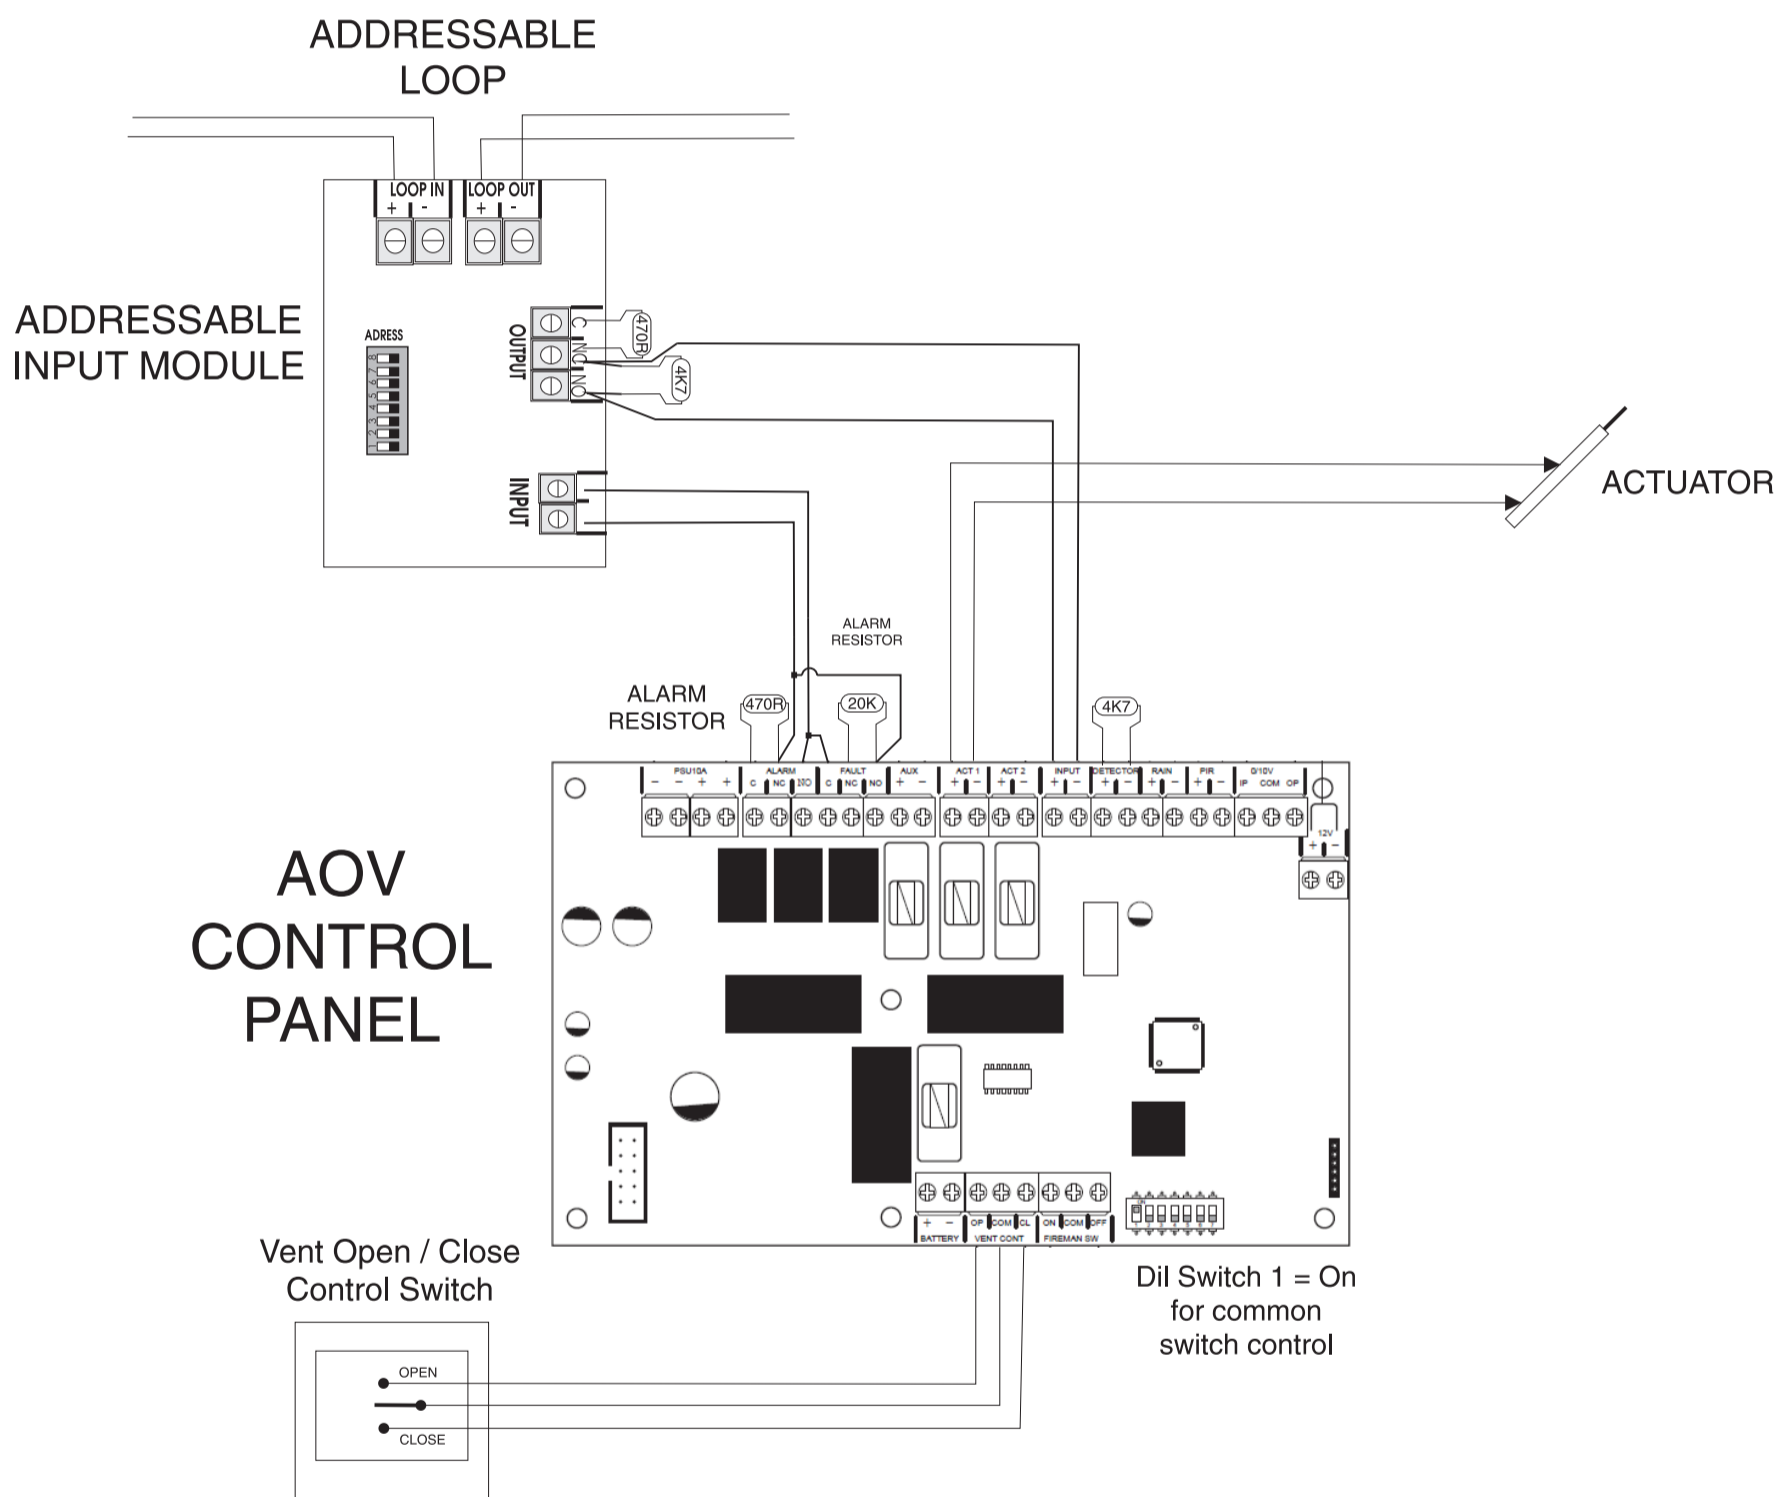

Note:- AOV input non latching will automatically reset when output on loop module is reset.



Columbia House, Packet Boat Lane, Cowley Peachey
Uxbridge, Middlesex, UB8 2JP
Telephone: West Drayton (01895) 422066
Fax: (01895) 420603

Approved by	Date	Issue	Title/Description
	24/02/17	1	AOV panel controlled via Addressable panel as Input and output
DRAWING No	CCD-2994-203		
Drawn by:	M.DURBRIDGE		